

Instrukcja montażu EASY

Wykaz części:

- A. 5x kółek jezdnych
- B. 1x podstawa krzesła
- C. 1x podnośnik pneumatyczny
- D. 4x śruby oparcia (6x45 mm)
- E. 4x podkładki pod śruby (6x16 mm)
- F. 1x oparcie
- G. 1x siedzisko
- H. 1x klucz imbusowy

Regulacji wysokości siedziska

dokonujemy poprzez

pociągnięcie do góry dźwigni umieszczonej po jego prawej stronie. Siedzisko można podnieść kiedy nikt na nim nie siedzi. Opuszczenie siedziska jest możliwe, gdy Użytkownik z niego korzysta.

Blokowanie ruchu oparcia


Skierowanie do dołu dźwigni umieszczonej po lewej stronie siedziska zwalnia ruch oparcia naśladujący ruch Użytkownika w krześle. Aby zablokować ruch oparcia w wybranej pozycji skieruj dźwignię do góry.

Regulacja siły oporu


Pokrętem pośrodku siedziska regulujemy siłę oporu, jaką stawia oparcie podczas ruchu.

Montaż:

1. Wcisnąć kółka do podstawy krzesła oraz siłownik do otworu w podstawie.


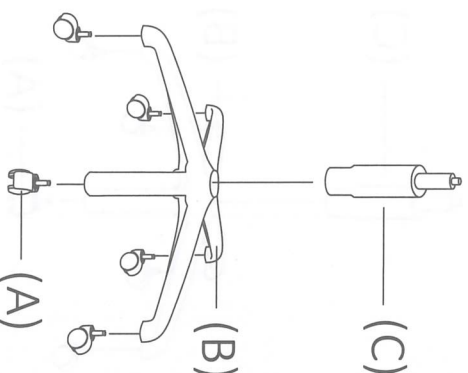


2. Wsunąć oparcie do siedziska i przykręcić oparcie do siedziska

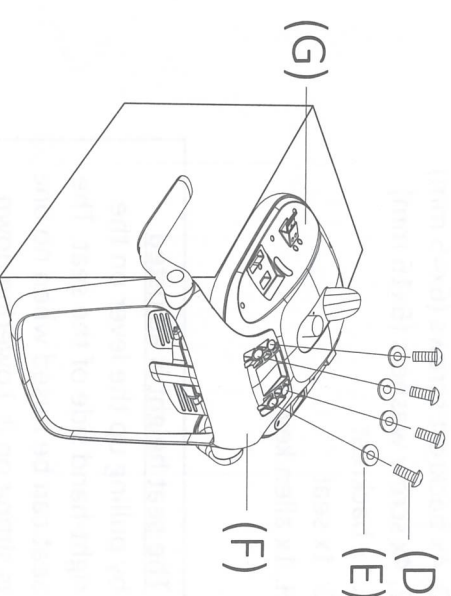

3. Nałożyć siedzisko na stożek podnośnika pneumatycznego. Połączenie stożkowe zacisnąć przez jednorazowe obciążenie siedziska.

4. Tak powinien wyglądać prawidłowo zmontowany fotel.

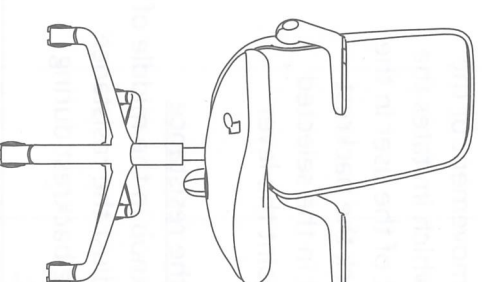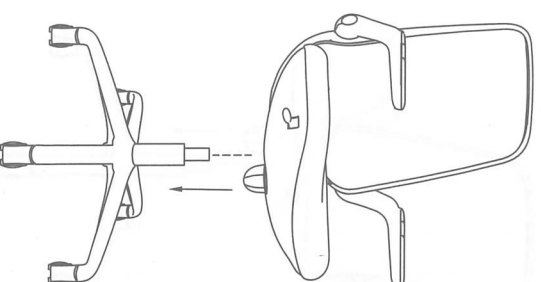

EASY Assembly instructions

Assembly:

List of parts:

- A. 5x castors
- B. 1x chair base
- C. 1x gas lift
- D. 4x backrest screws (6x45 mm)
- E. 4x screw washers (6x16 mm)
- F. 1x backrest
- G. 1x seat
- H. 1x allen key

The seat height is adjusted

by pulling up the lever on the right-hand side of the seat. The seat can be raised when no one is sitting on it. Lowering down the seat is possible when sitting.


Blocking the movement of the backrest

Pointing down the lever on the left-hand side of the seat slows down the movement of the backrest, which imitates the movement of the user in the chair. To lock the backrest movement in the selected position, point the lever upwards.


Adjusting the resistance

Using the knob in the middle of the seat adjust the resistance force of the backrest during movement.

1. Push the castors into the base of the chair and the gas lift into the hole in the base.

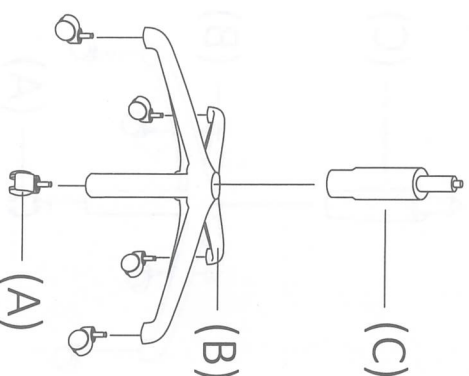

2. Slide the backrest into the seat and screw the backrest to the seat.

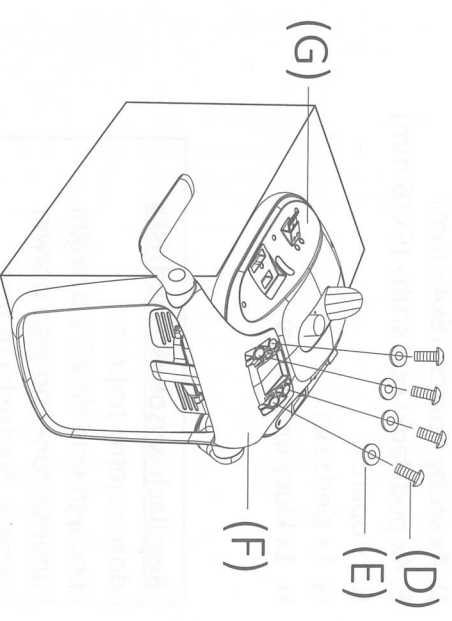

3. Place the seat on the pneumatic lift cone. Tighten the cone connection by exerting

pressure the seat once.

4. This is how a properly assembled seat should look.

