







AVIDA

DESIGN


Assembly Instruction

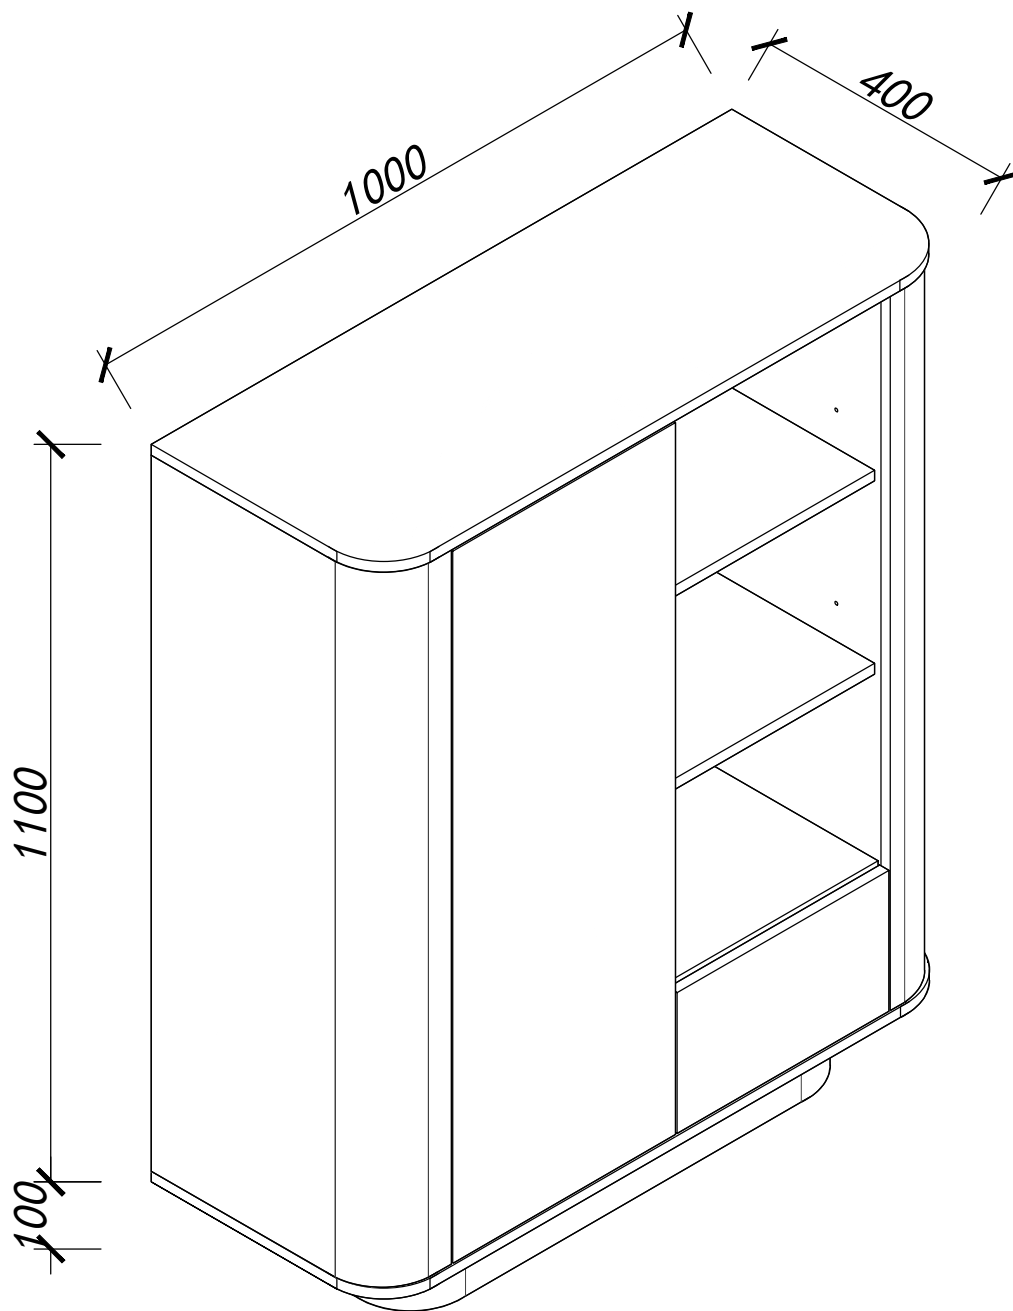

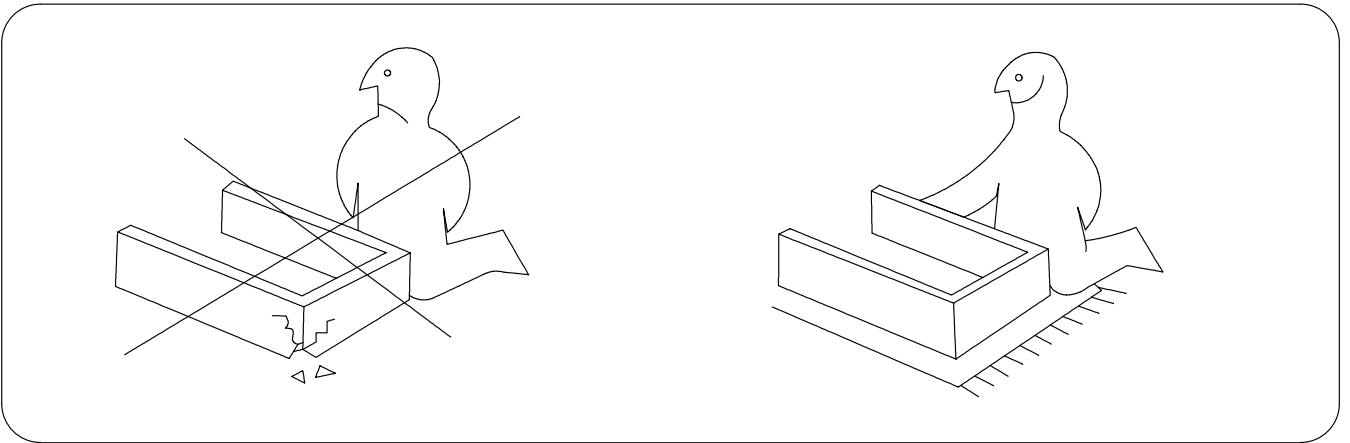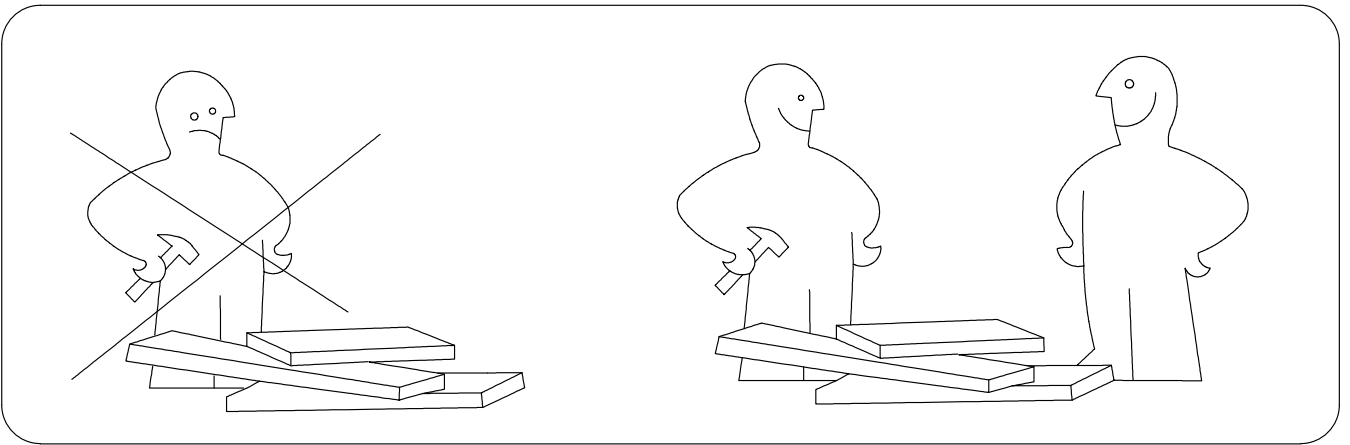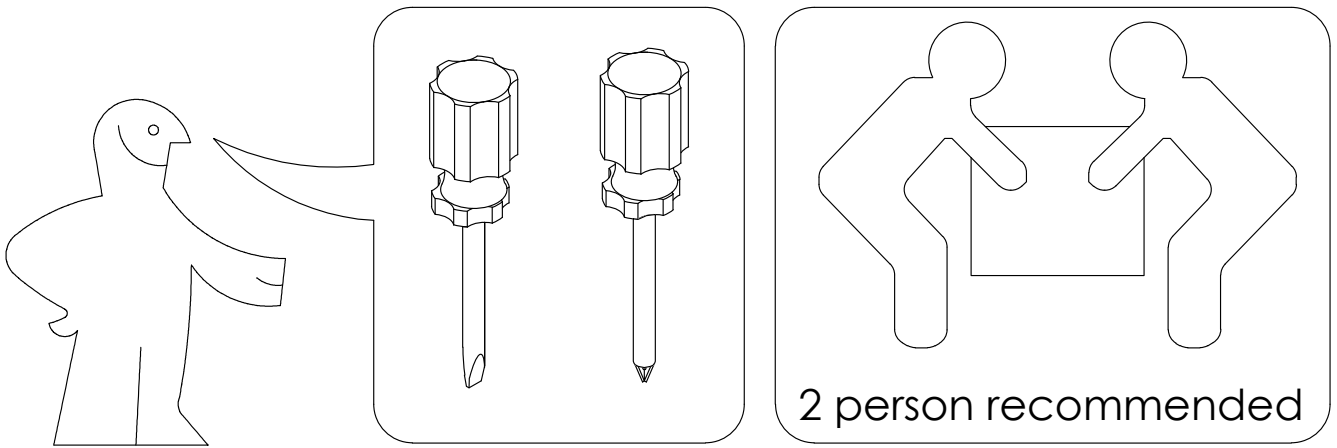


Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	1000*400*111	1
3	396*120*1068	1
4	396*120*1068	1
5	1068*377*16	1
6	368*350*16	2
7	368*350*16	2
8	371.5*356*16	1

Panel No	Panel Sizes	Quantity
9	1078*381*5	1
10	1078*381*5	1
11	1062*384*16	1
12	365*210*16	1
13	327*150*12	1
14	350*150*12	1
15	350*150*12	1
16	337*348*5	1

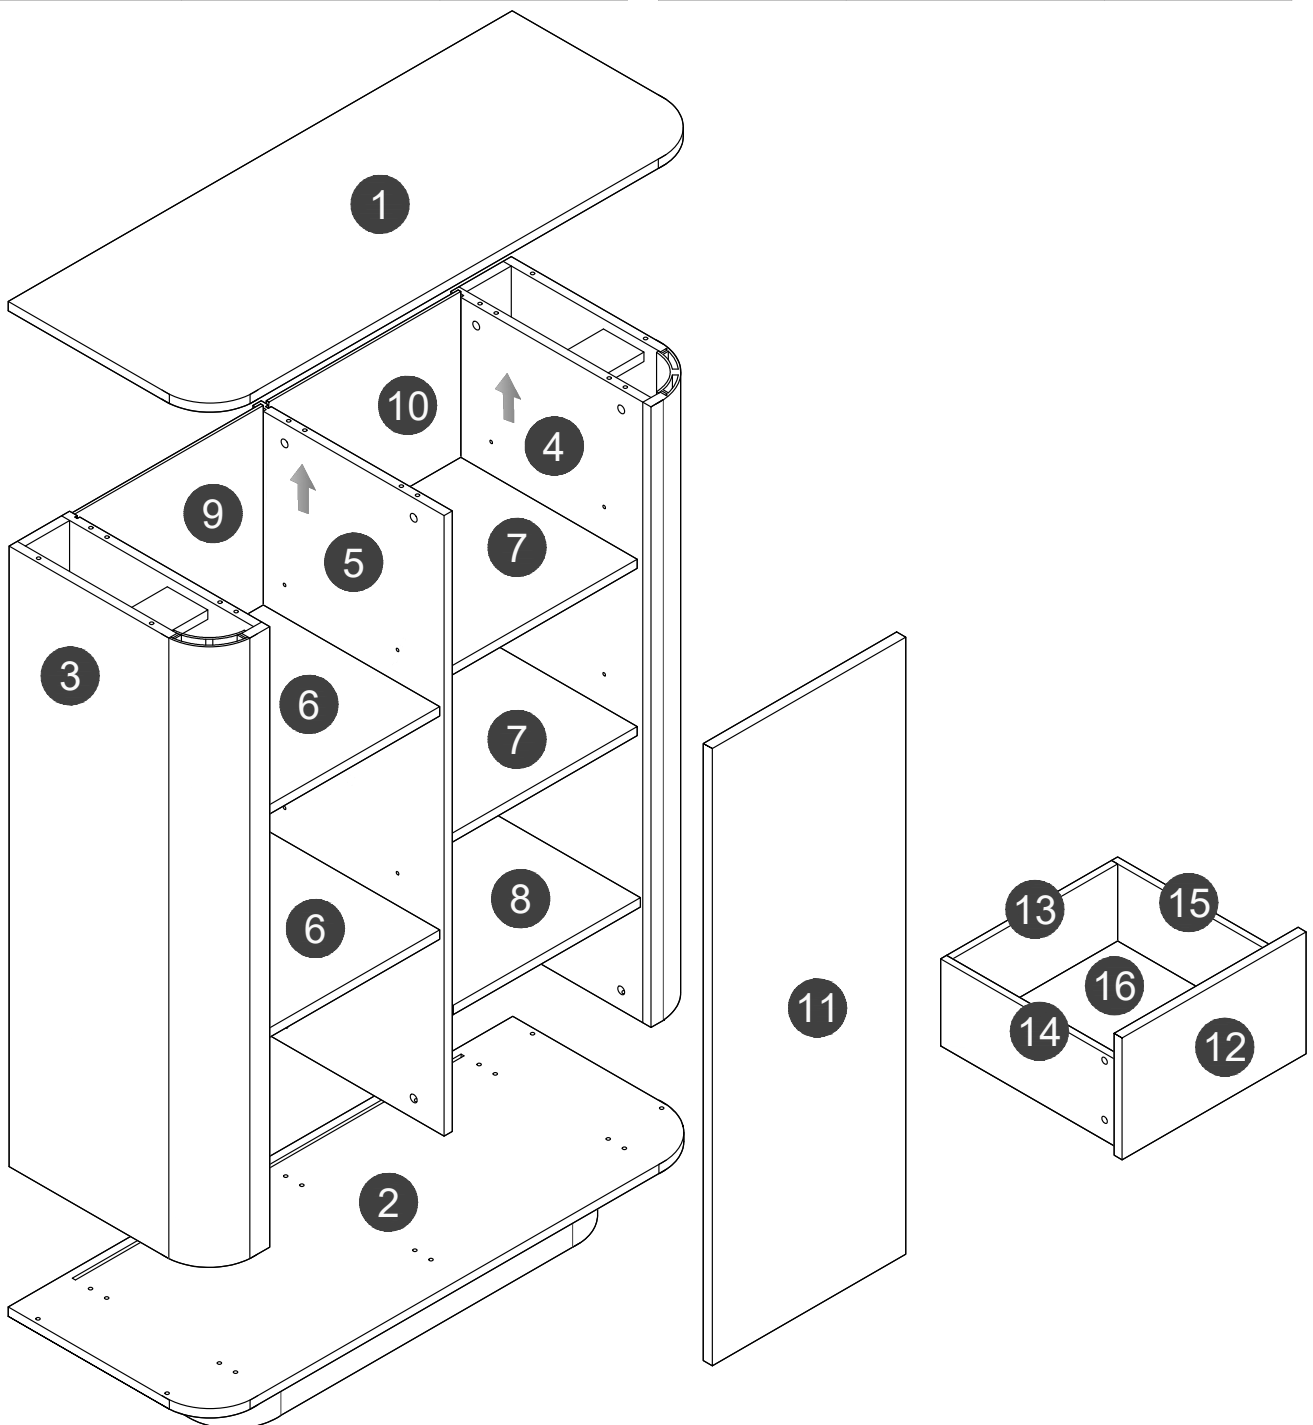


Fittings




M6*40

A=16



Φ8*30

B=24

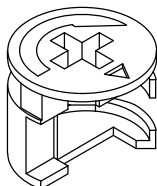


Φ15*12

C=16




Φ21


D=24

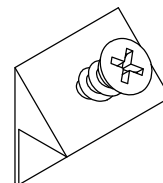


E=16

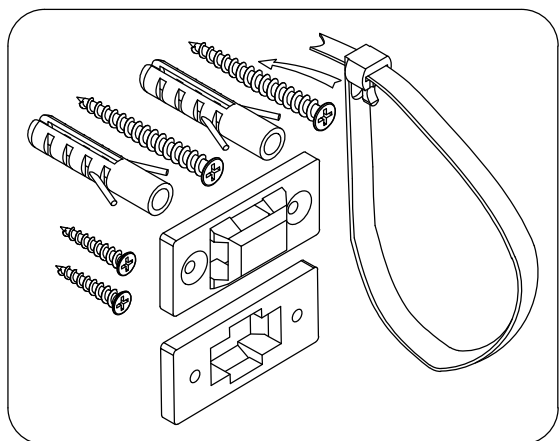

F=2

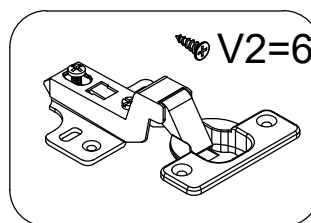

I3=3

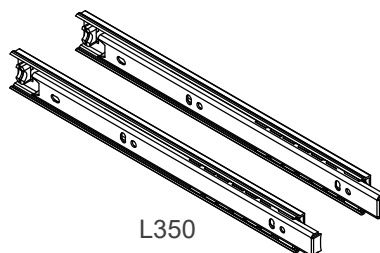

L350

N=1




M6*34

O=8




Φ12*10.5

P=8

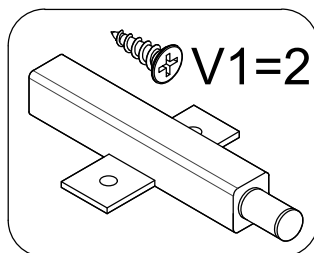

K=2

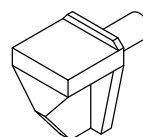


L=16




M3.5*12


V1=8

STEP 1


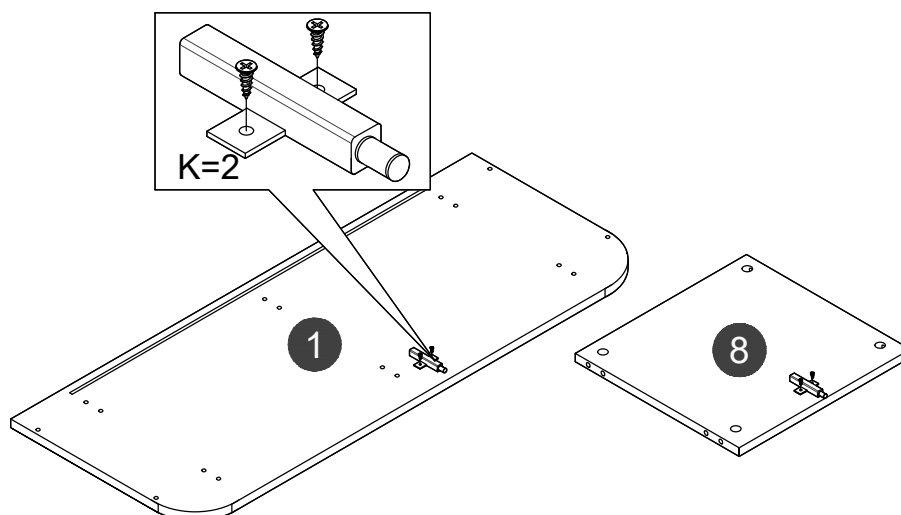


STEP 2

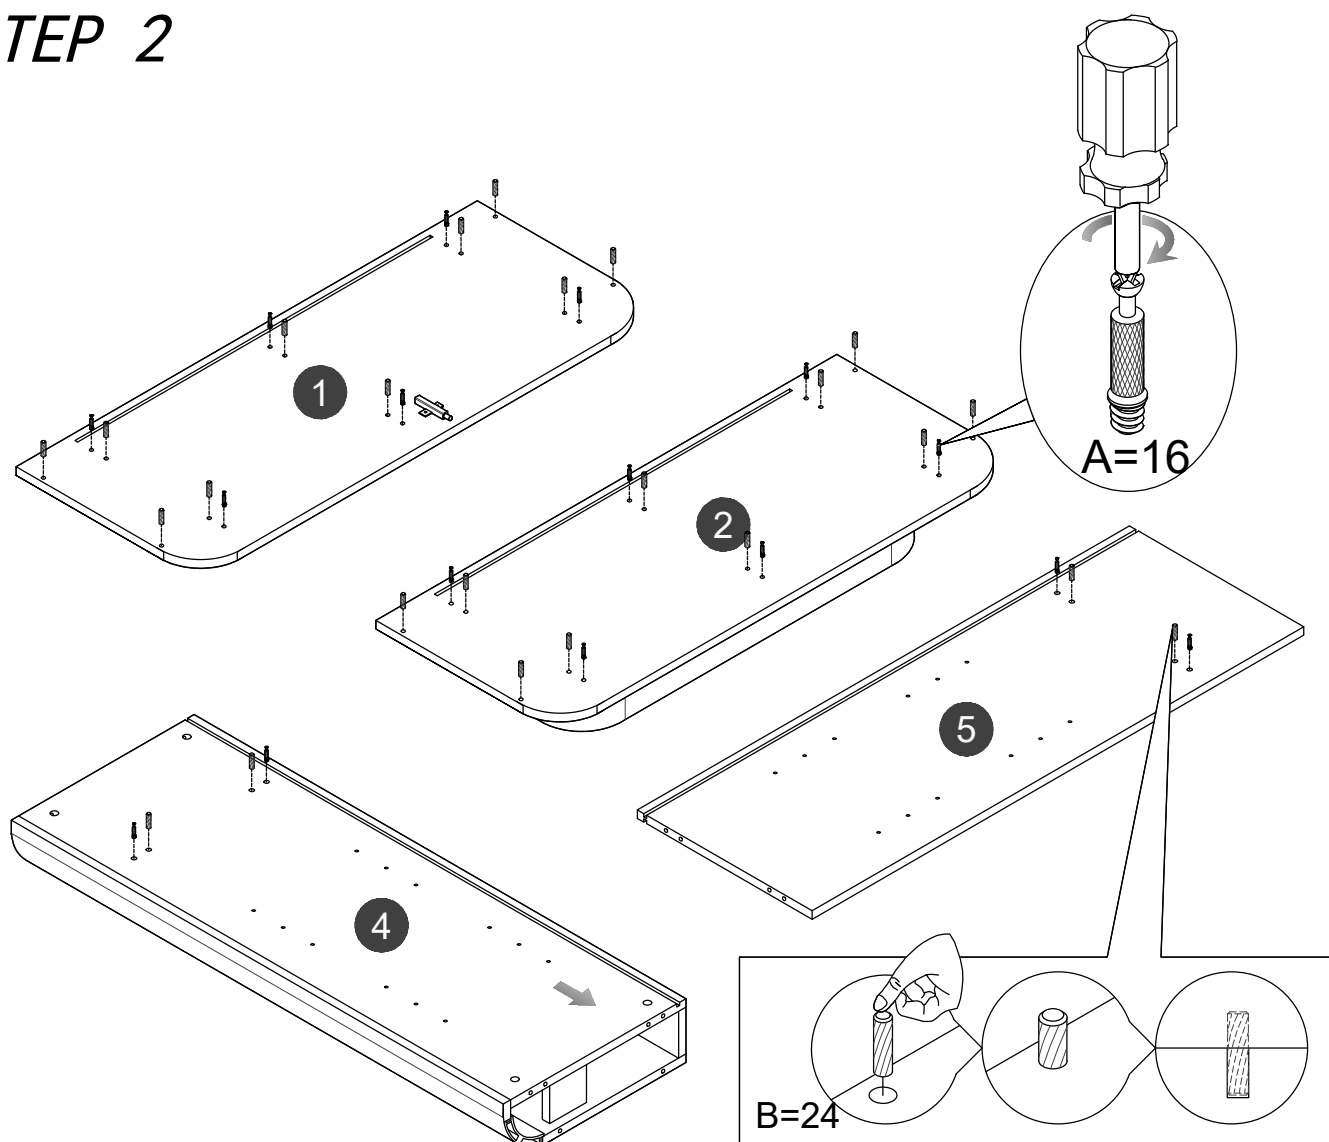


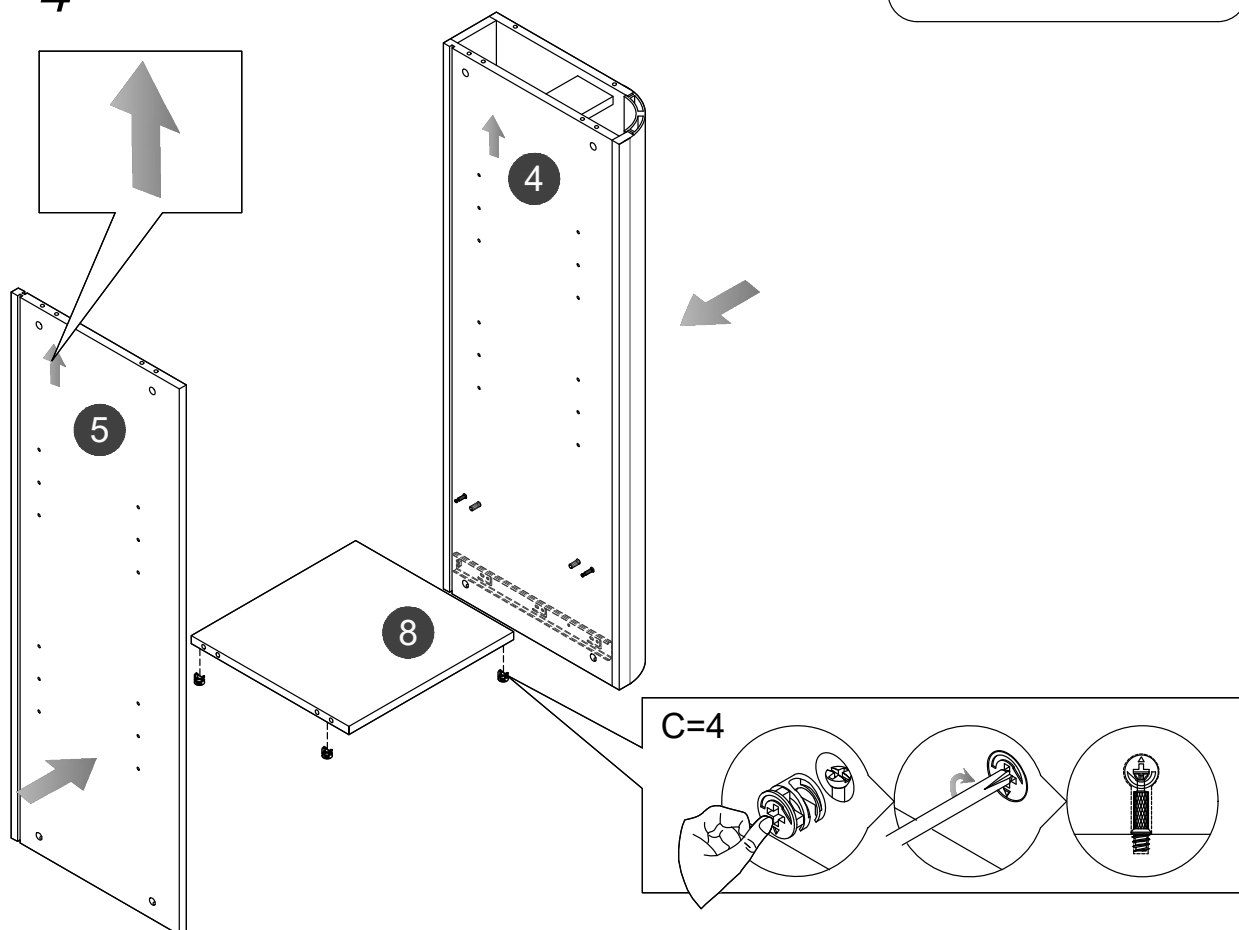


STEP 5

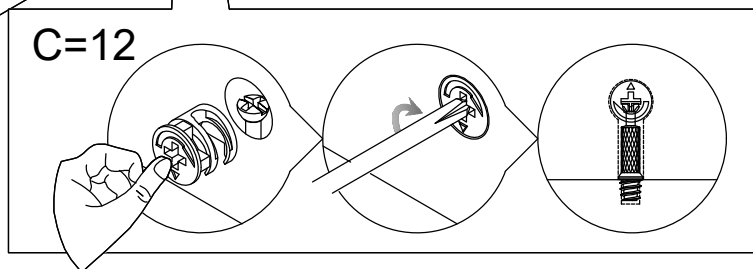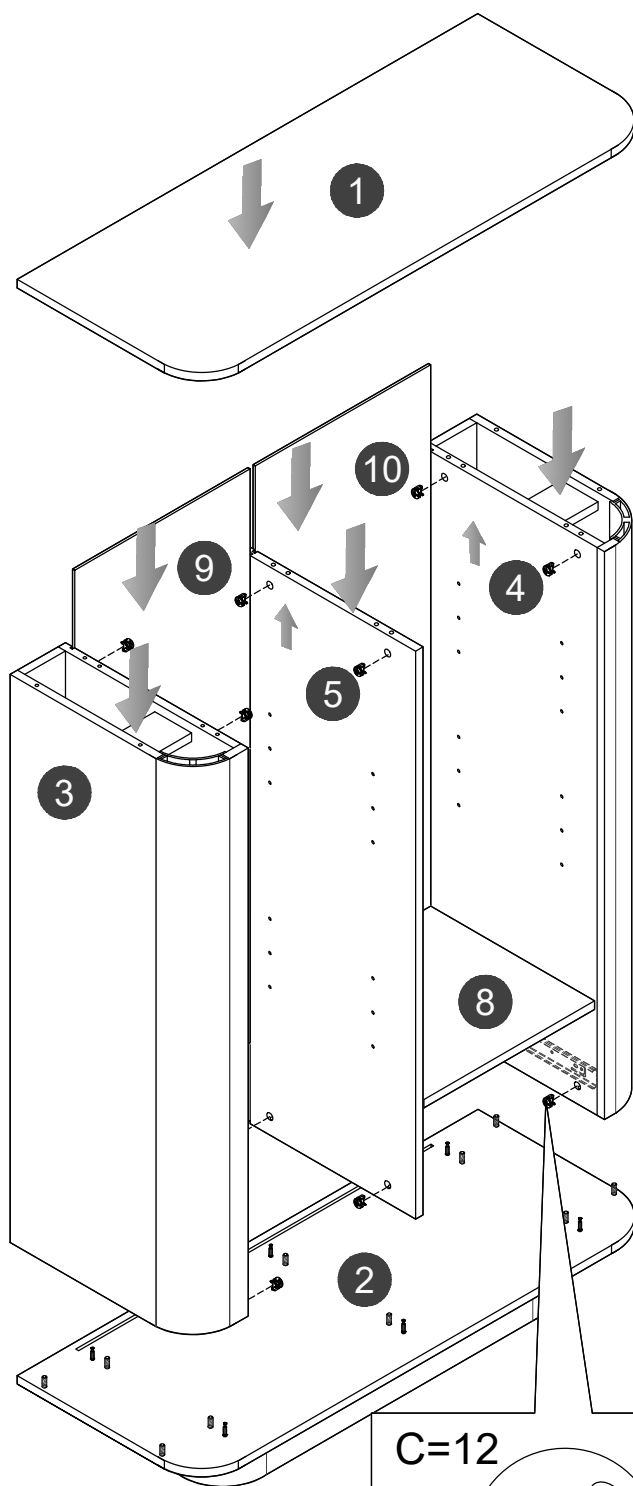


STEP 6

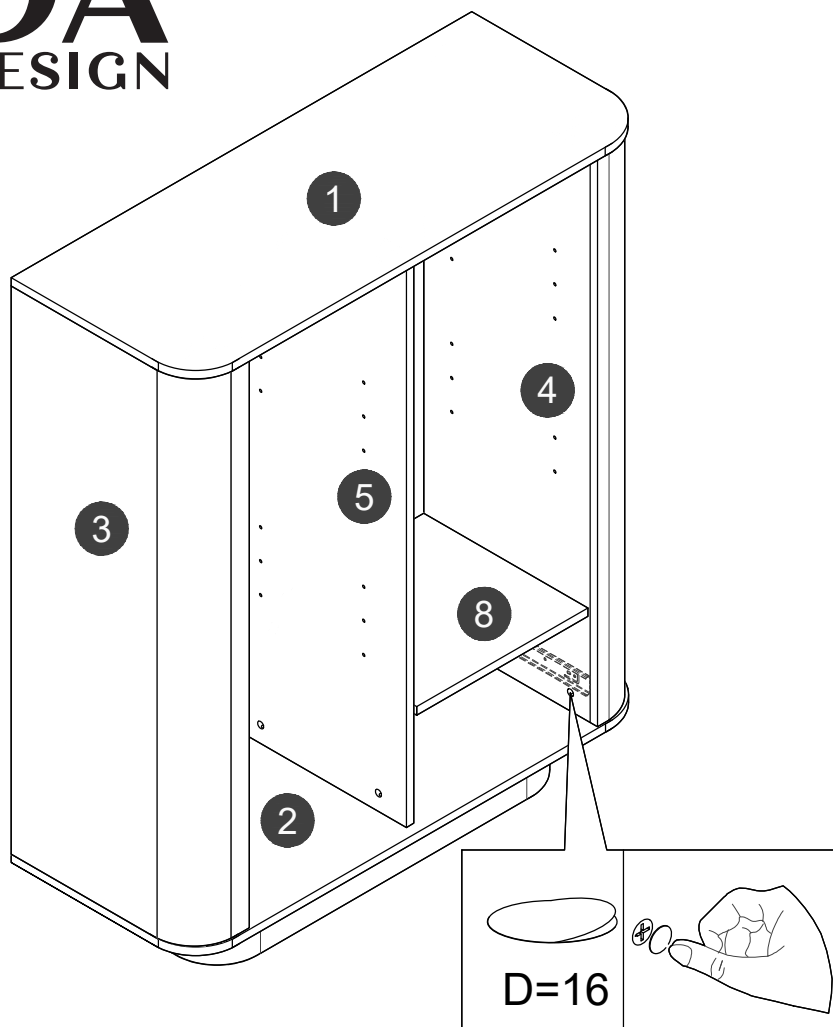


STEP 7

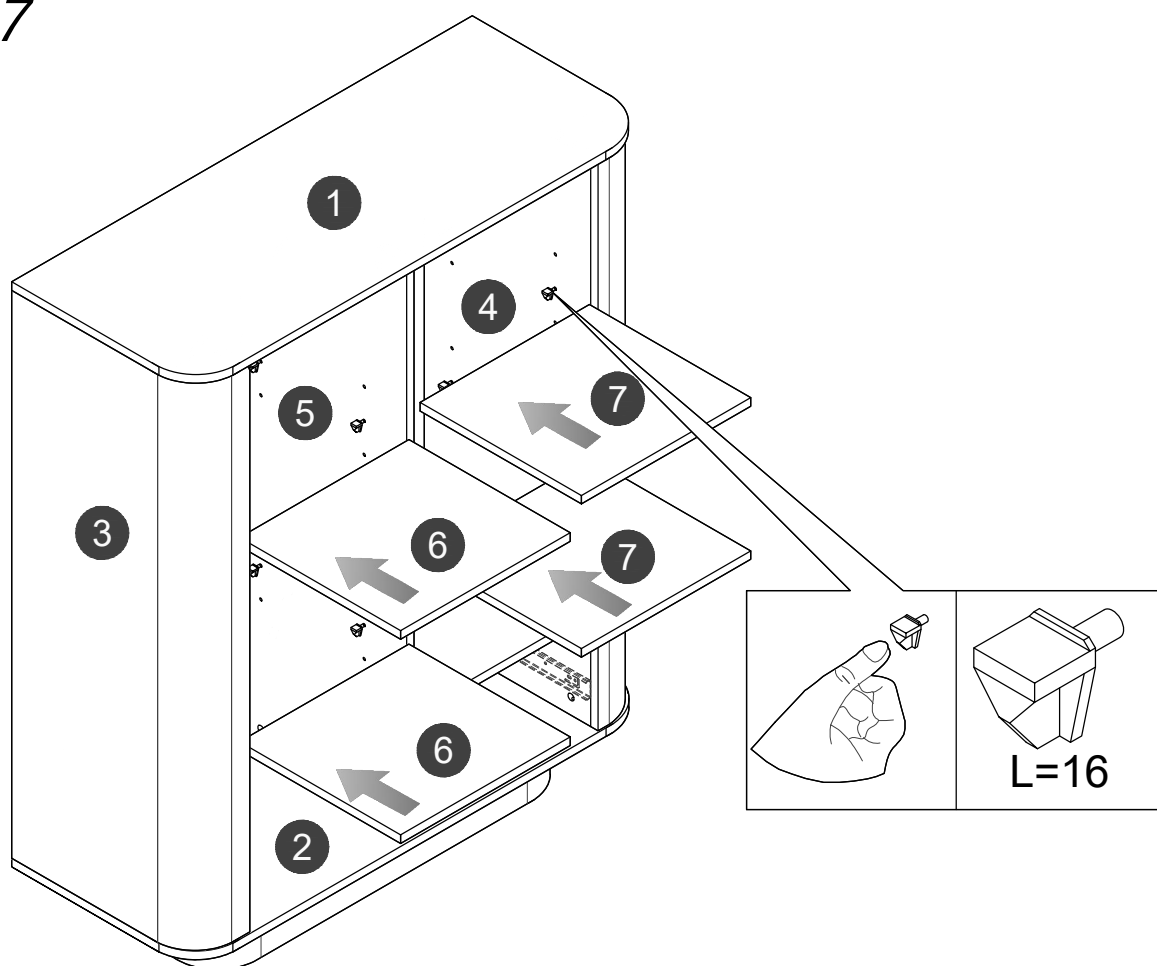





STEP 8

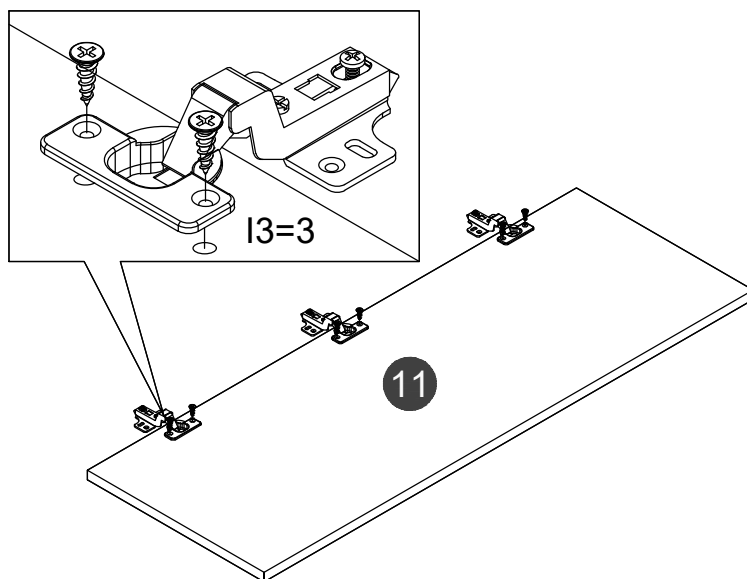

STEP 9

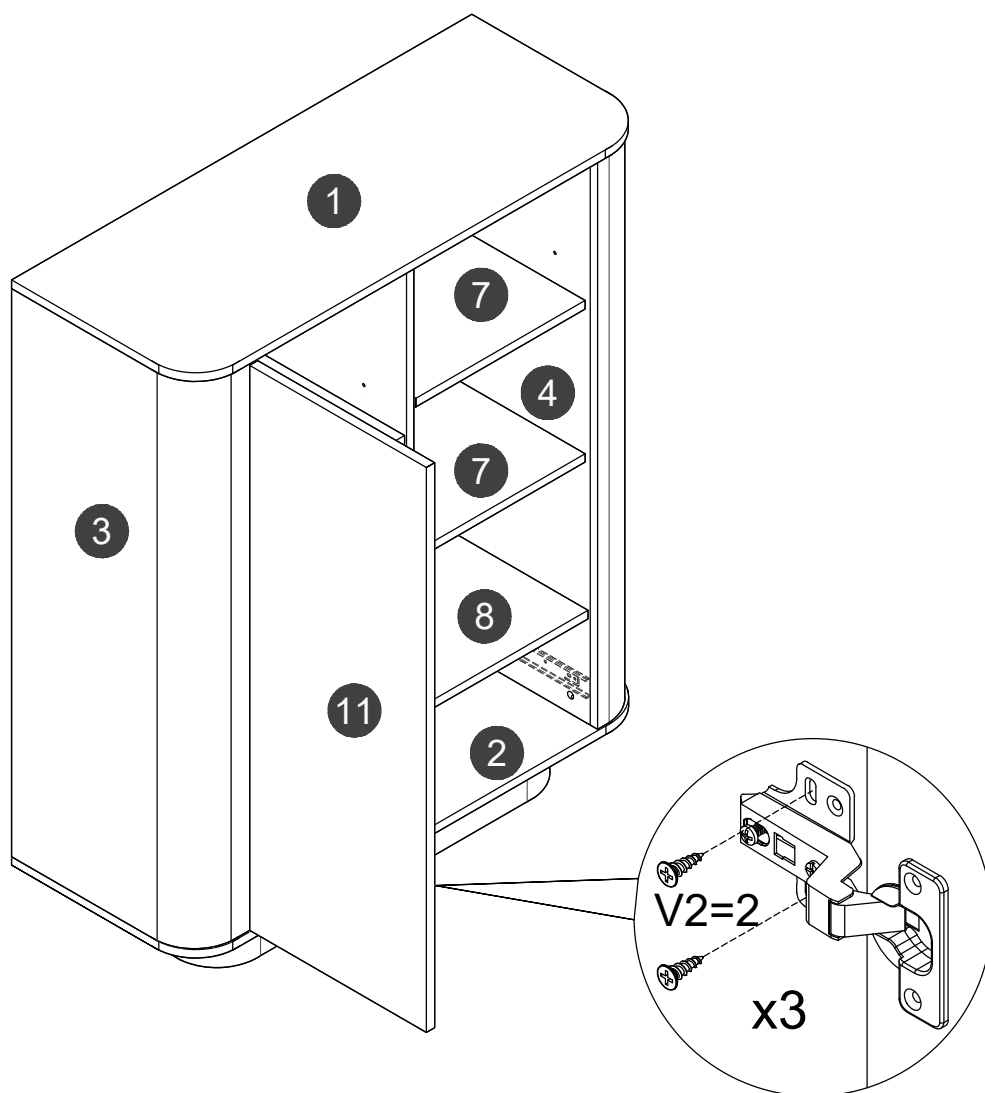


STEP 10

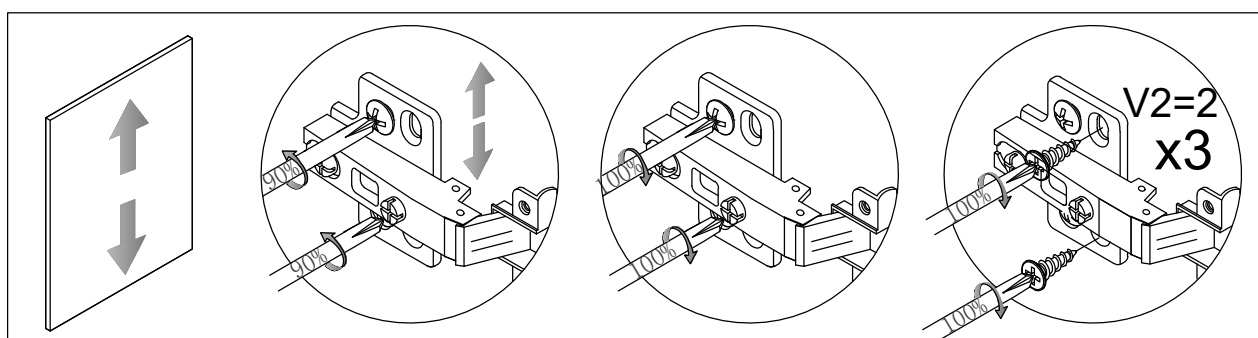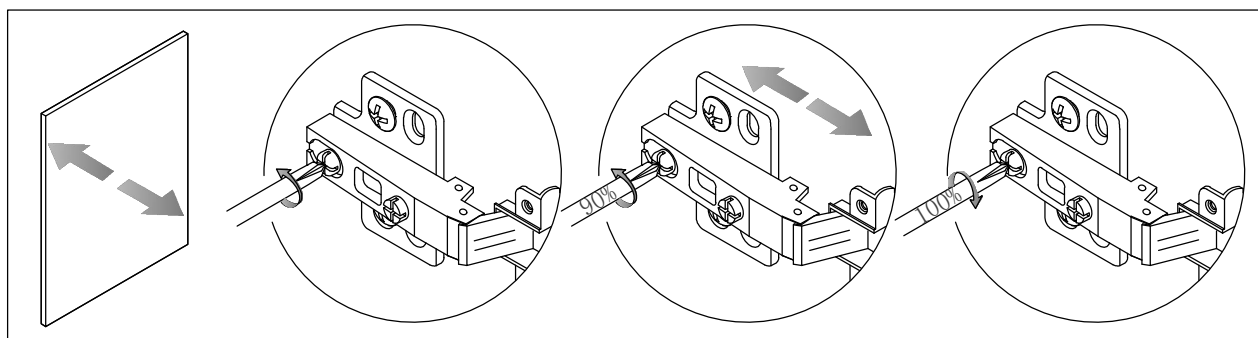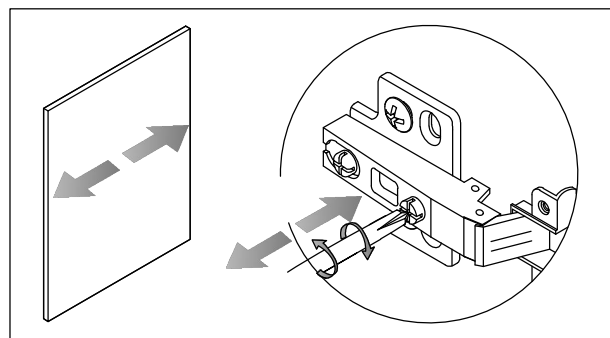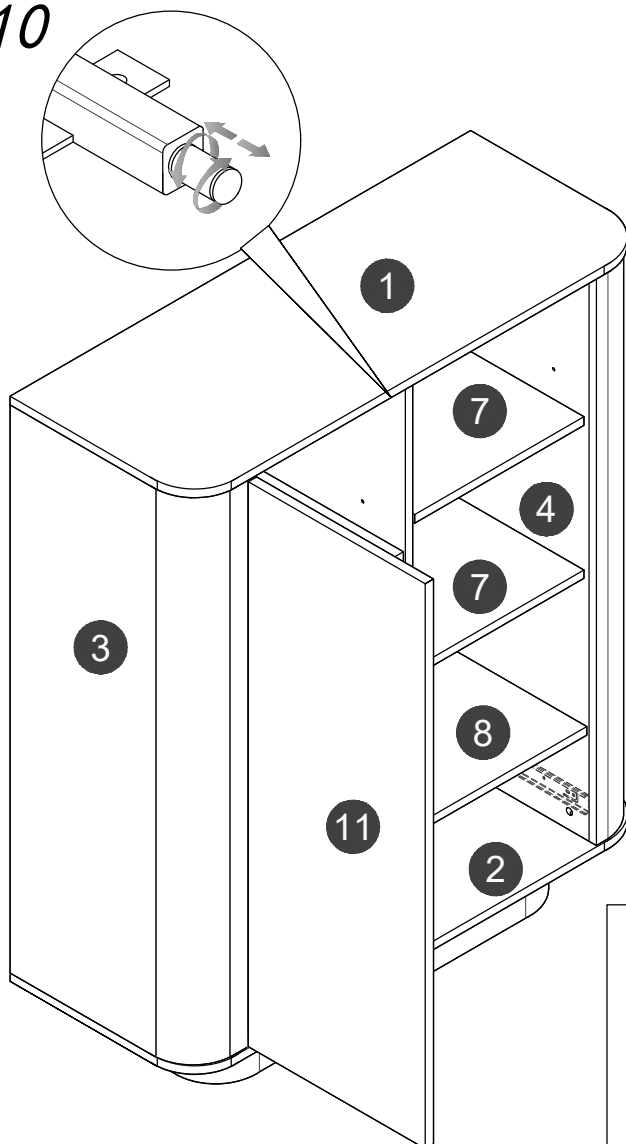


STEP 11


11-1

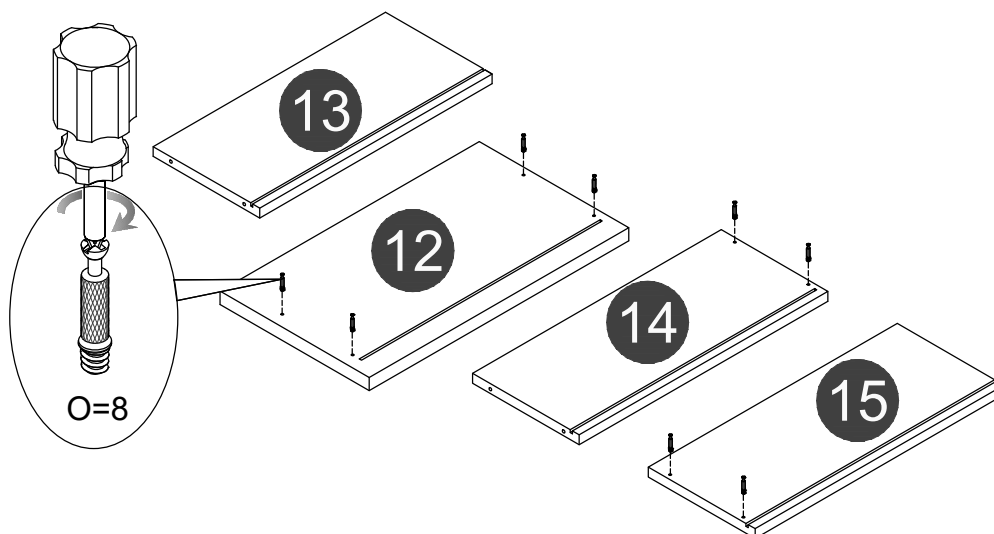


11-2

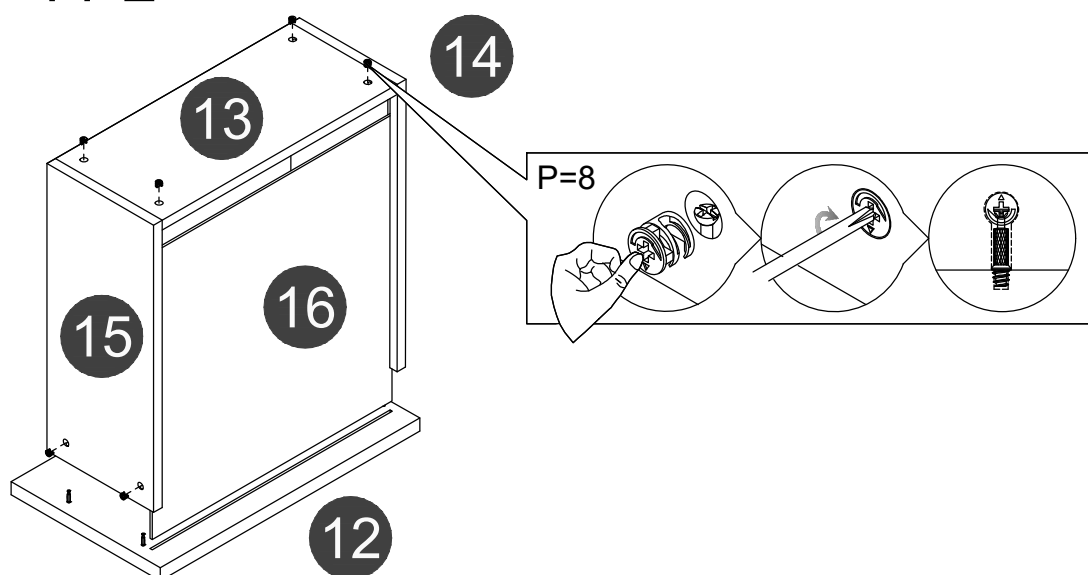


11-3

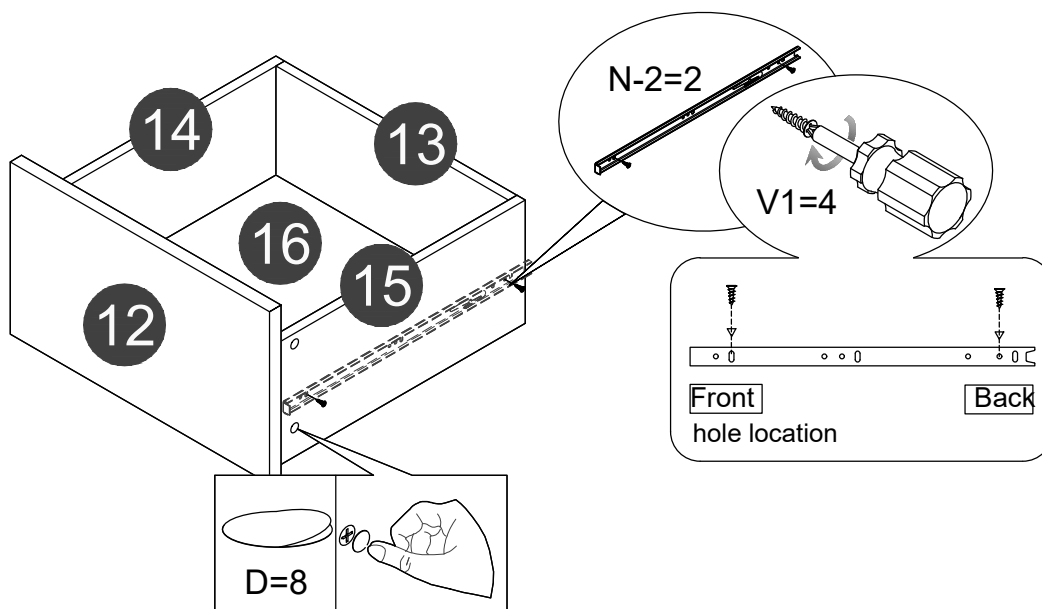


STEP 12

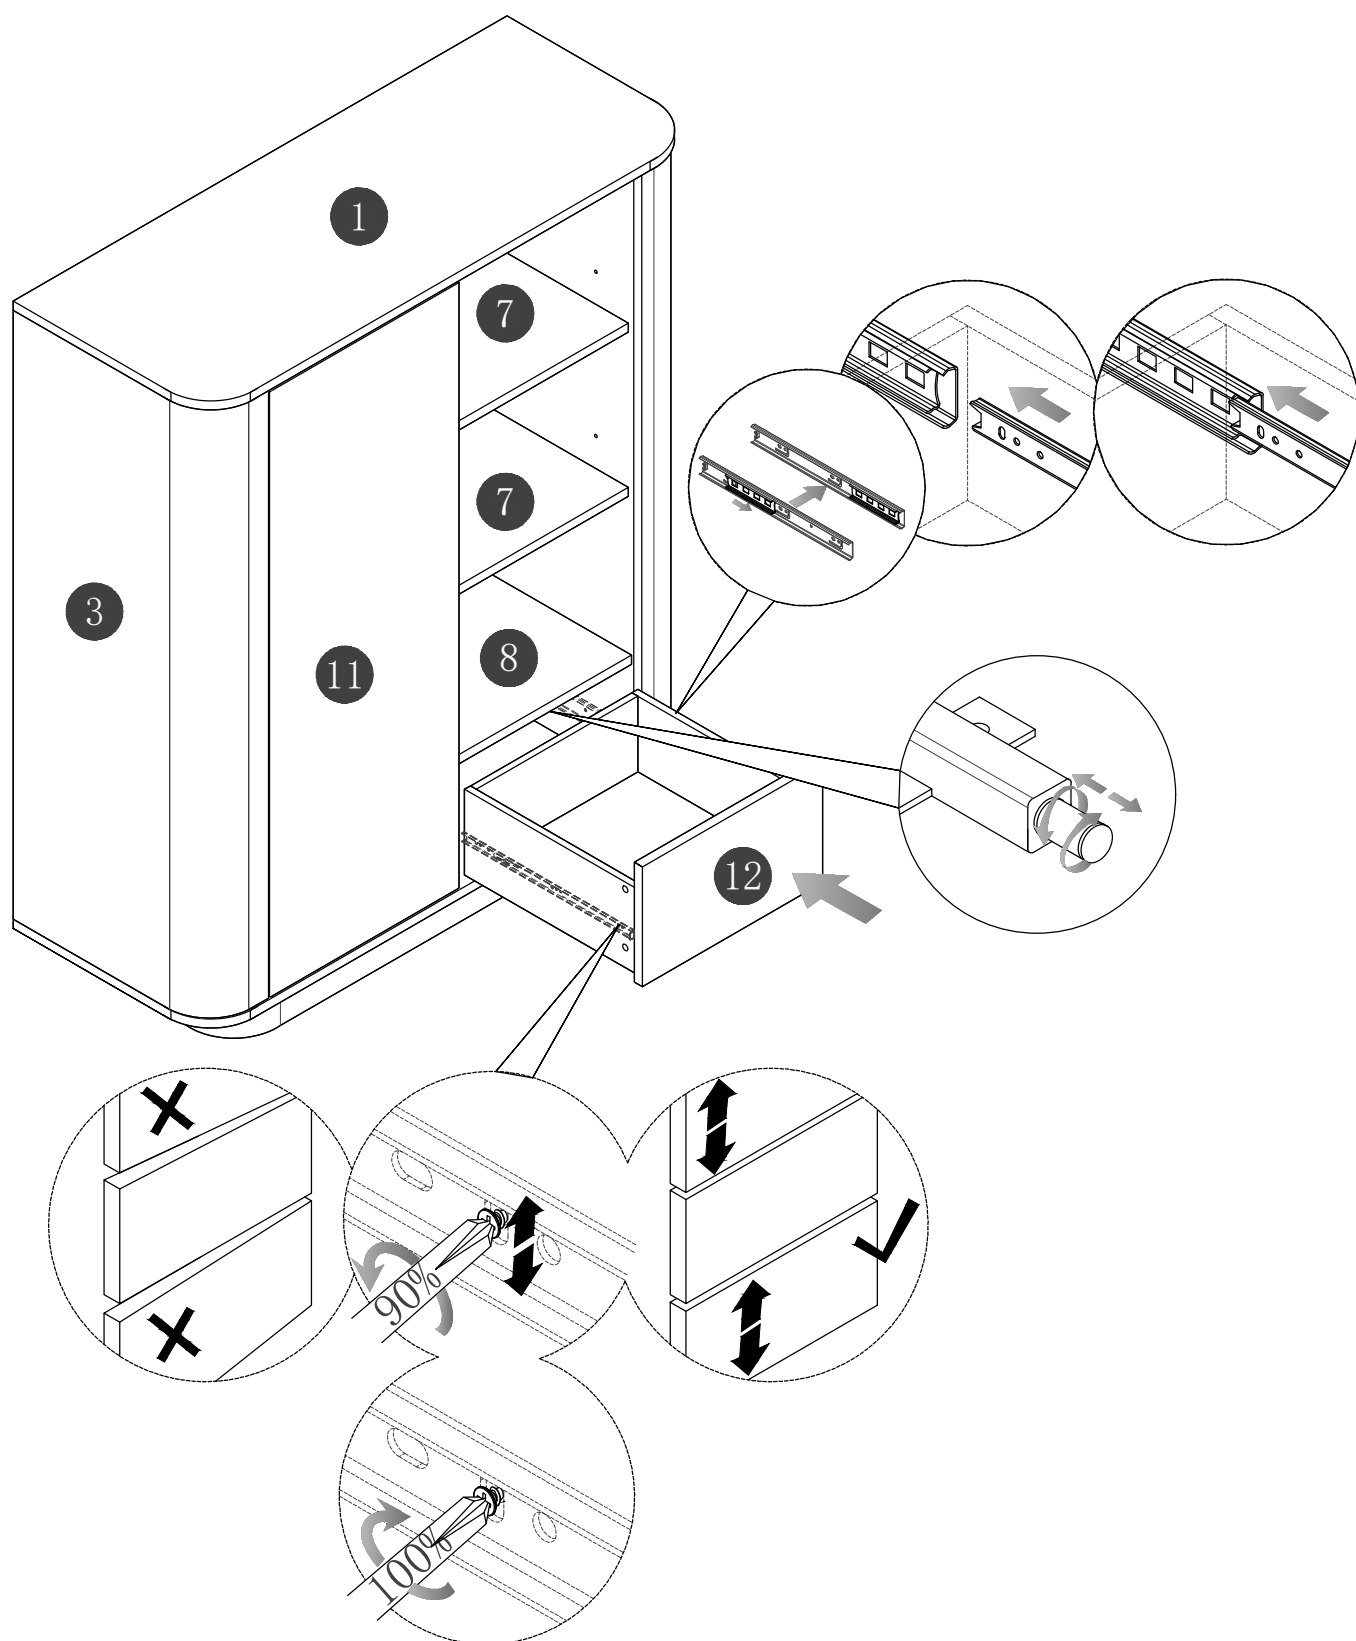


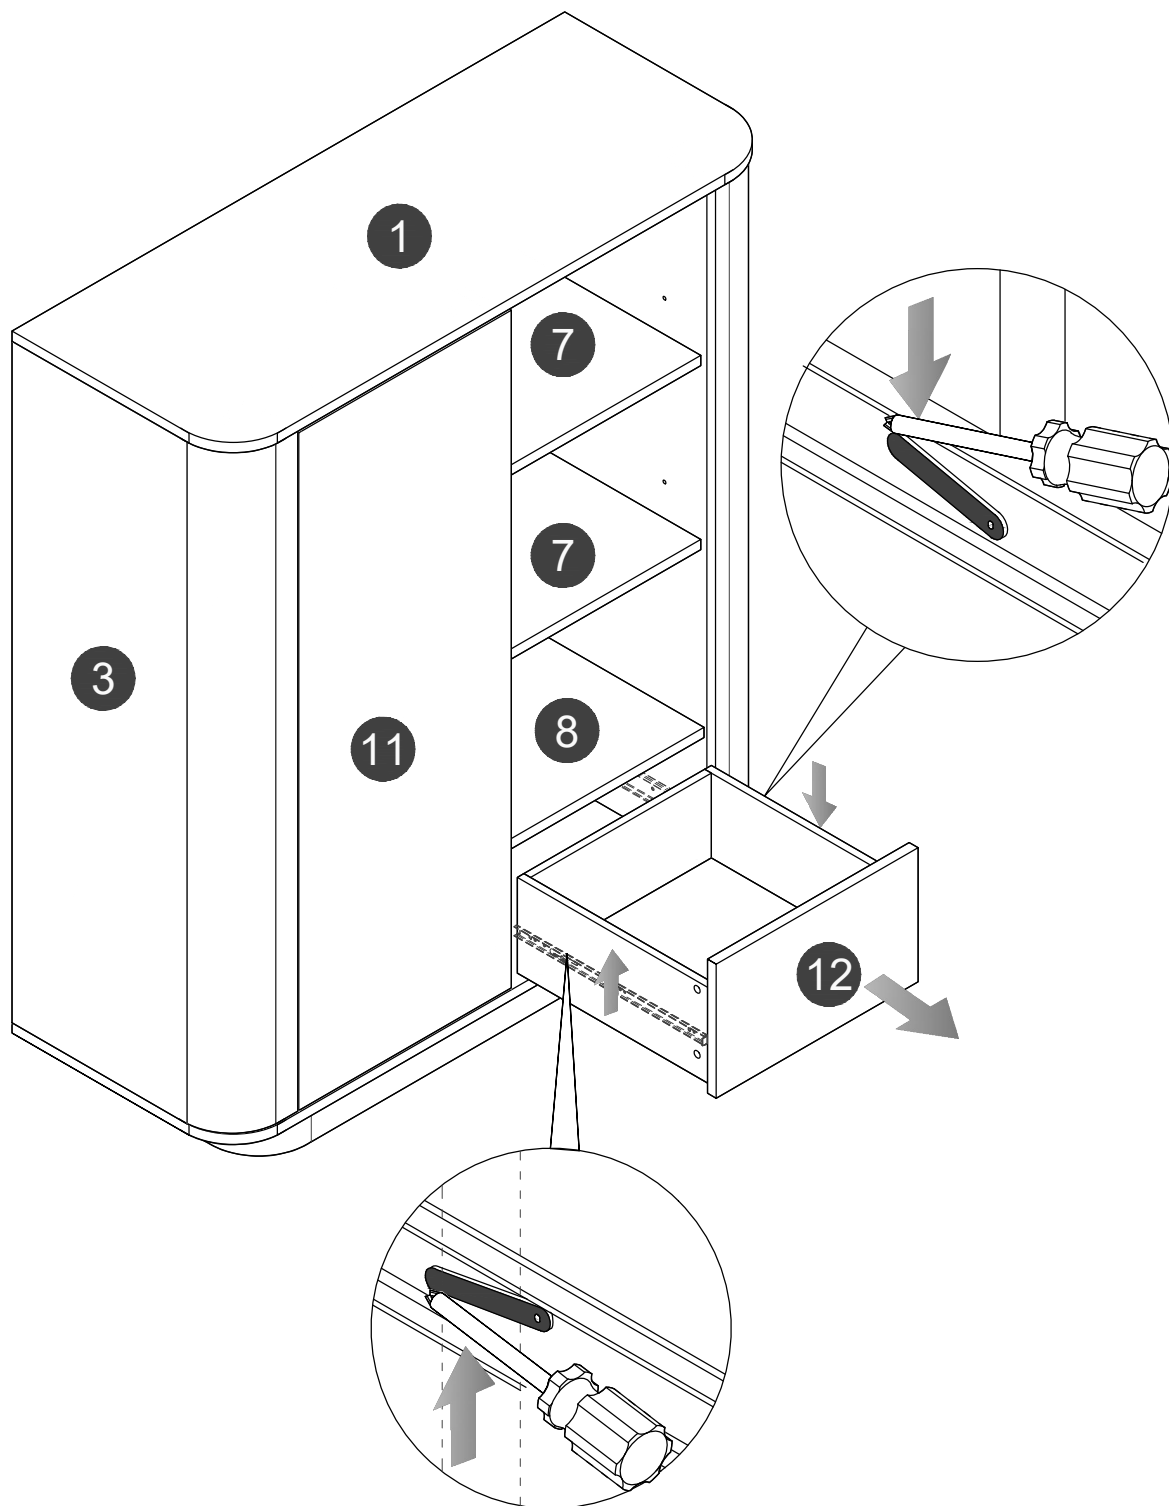


STEP 14

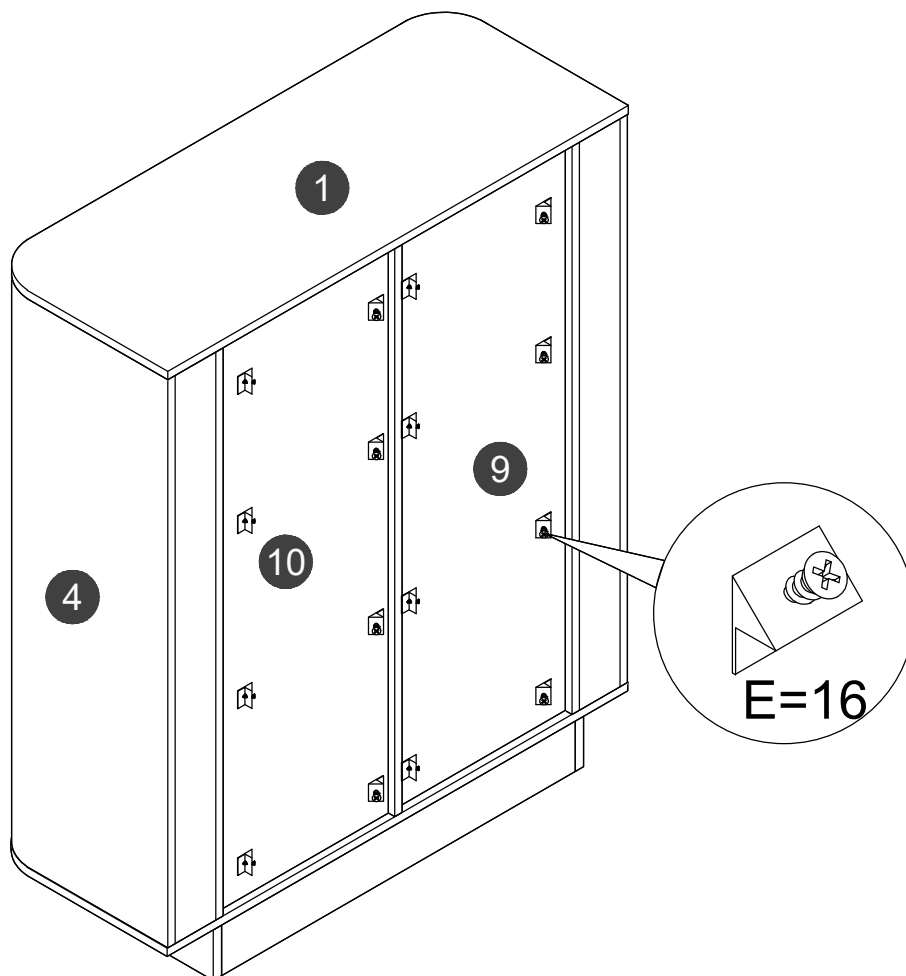

STEP 15

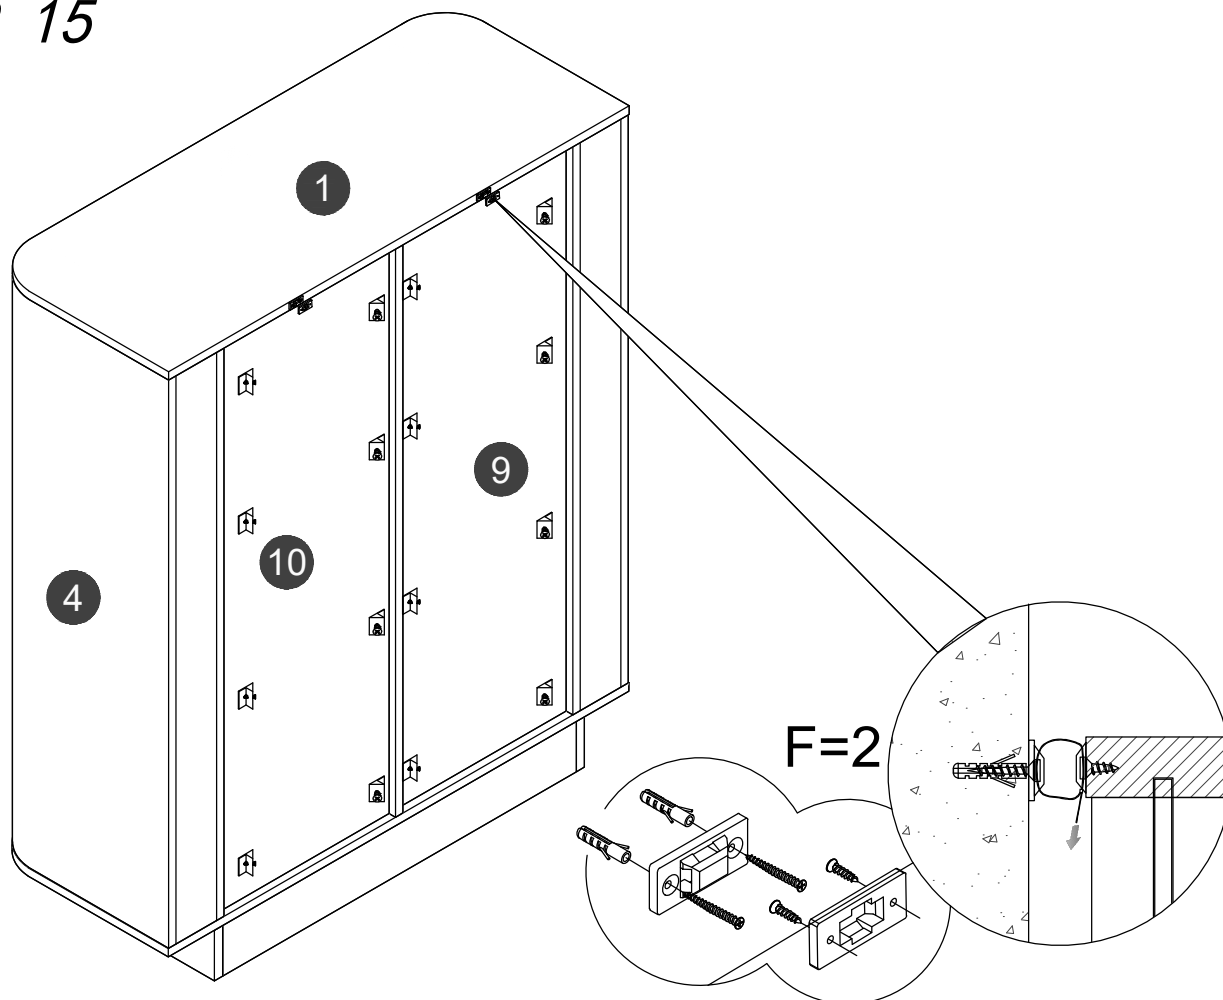

STEP 16

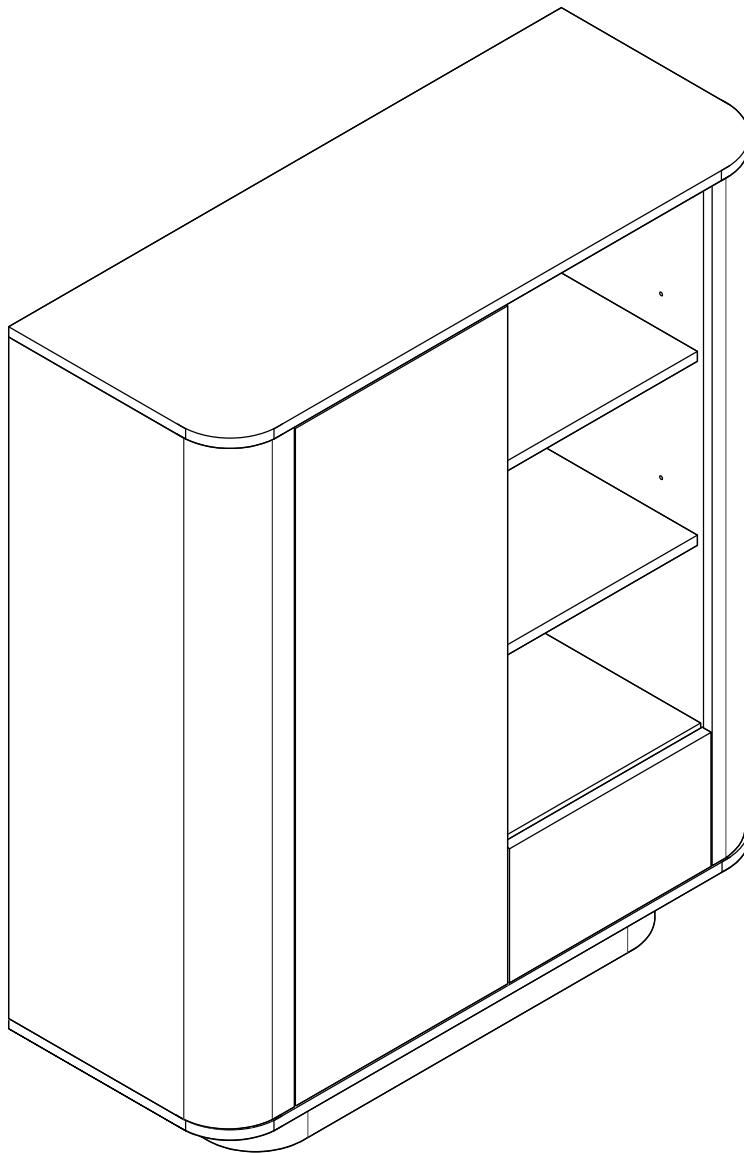

Finish